



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory
270 S. Stone Avenue Tucson, AZ 85701-1917

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-002265 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

TS4
5.10-2011

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 05/05/11 Cal 1 0.101 AC Cal 2 0.100 AC

Between the dates of 04/07/2011 and 05/05/2011 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on N/A.

The instrument was returned to service on N/A.

Cheryl K. Straub


Cheryl K. Straub

05/10/2011

ADPS QAS Permit # 33408

SUBSCRIBED AND SWORN to before me this 10, day of

May, 20 11.

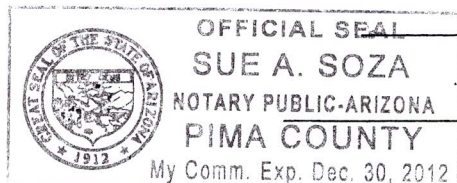

Sue A. Soza

Notary Public

*Includes documents specified in A.A.C. R13-10-104.A.5

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

EXHIBIT G-4

187
CS

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

TS4
5.10.2011

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Cheryl STRAUB AGENCY Tucson Police Department
DATE 05/05/2011 TIME 08:30
INTOXILYZER SERIAL # 80-002265 LOCATION TEAM 5

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

(✓) 1. Clock time check.
(✓) 2. Date check.

OPERATIONAL TESTS

(✓) 1. Alcohol-free subject test result 0. 000 AC.
(✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
(✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
(✓) 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 100 AC

Instrument is operating properly and accurately. YES ✓ NO

COMMENTS

SIGNATURE

Cheryl Str

277
CS

TS4

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number : 80-002265

05/05/2011

08:31:36

Standard Lot#: 20910100A1

Last Changed By: C. STRAUB

#50772

QAS: C. STRAUB

#50772

TUCSON PD

Operator: C. STRAUB

#50772

TUCSON PD

Subject: SQAP, SQAP

DOB: 11/11/1111

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:32:23
Diagnostic Test	Pass	08:32:50
Air Blank	0.000	08:33:17
0.100 Cal Check	0.100	08:33:36
Air Blank	0.000	08:34:05
Subject Test	0.000	08:34:33
Air Blank	ABT*	08:34:40
Air Blank	0.000	08:35:08

*Sequence Aborted

Not a Successfully Completed Test Sequence

327
CS

154

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number : 80-002265
05/05/2011 08:35:13

Standard Lot#: 20910100A1
Last Changed By: C. STRAUB #50772

QAS: C. STRAUB #50772
TUCSON PD

Operator: C. STRAUB #50772
TUCSON PD

Subject: SQAP, SQAP
DOB: 11/11/1111
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	08:35:43
Air Blank	IPS**	08:35:51

*RFI Detect
**Improper Sample

Not a Successfully Completed Test Sequence

487
c8

154

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number : 80-002265

05/05/2011

08:35:55

Standard Lot#: 20910100A1

Last Changed By: C. STRAUB

#50772

QAS: C. STRAUB

#50772

TUCSON PD

Operator: C. STRAUB

#50772

TUCSON PD

Subject: SQAP, SQAP

DOB: 11/11/1111

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:36:49
Diagnostic Test	Pass	08:37:17
Air Blank	0.000	08:37:44
0.100 Cal Check	0.101	08:38:03
Air Blank	0.000	08:38:32
Subject Test	0.163*	08:41:41
Air Blank	0.000	08:42:13
Air Blank	0.000	08:42:40
Subject Test	XXX**	08:42:58
Air Blank	0.000	08:43:32

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

587
02

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number: 80-002265

05/05/2011

08:43:50

54


Standard Lot#: 20910100A1

Last Changed By: C. STRAUB #50772

QAS: C. STRAUB #50772

TUCSON PD

Test	g/210L	Time
Air Blank	0.000	08:44:18
Cal Check	0.100	08:44:36
Air Blank	0.000	08:45:06

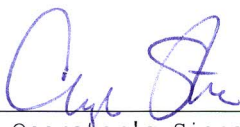

Operator's Signature

EXHIBIT G-2

687
08

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

TS4
5-10-2011

STANDARD CALIBRATION CHECK PROCEDURE

QA Specialist Cheryl STRAUB AGENCY Tucson Police Department
DATE 05/05/2011 TIME 08:30
Intoxilyzer Serial # 80-002265 Location TEAM 5

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution N/A AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 101 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE

Cheryl Straub

DPS Form Exh G-2 (Rev. 05-01)

787
CS

154

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number: 80-002265

05/05/2011

08:30:16


Standard Lot#: 20910100A1

Last Changed By: C. STRAUB #50772

QAS: C. STRAUB #50772

TUCSON PD

Test	g/210L	Time
Air Blank	0.000	08:30:44
Cal Check	0.101	08:31:02
Air Blank	0.000	08:31:32

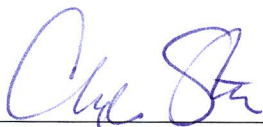

Operator's Signature